



Make sure the surface is smooth. Then apply a stuc primer onto the surface.



Weigh the correct amount of Component A (1 part in weight) and Component B (1.2 part in weight) + 2% colour pigment of your choice.



Mix Component B with Component A with the High Shear mixer till all lumps have disappeared (approx. 2 minutes).





Apply a 1st layer of A1 Plaster Finish using a stucco and level it (approx. 1 mm thickness).



Use a stucco to create some structure (or any other tool) in the 1st A1 Plaster Finish layer. Processing time is max. 1 hour.



Result: 1st layer of A1 Plaster Finish. It's possible to scrape off the sharp upright edges...



... with a Chinese knife before the 1 hour curing time. This will save a lot of sanding.



After curing (approx. 1 hour) lightly sand the surface with P80 sandpaper.



Result after sanding the 1st layer. Directly after sanding, the 2nd layer of A1 Plaster Finish can be applied.



Mix a new quantity of A1 Plaster Finish and apply a 2nd layer onto the surface and level it. You can use the same or a different colour.



After curing (approx. 1 hour) sand the 2nd layer with P120 (fine) sandpaper until you have a smooth surface.



Result after sanding for the 2nd time.



Last step is to apply the A1 Sealer.




Use a cloth or sponge. Apply A1 sealer, diluted with 30% of water, and immediately wipe out with a clean dry cloth. After drying repeat the process for 2nd layer.



Result of this surface finish. Of course, different colour shades are possible.



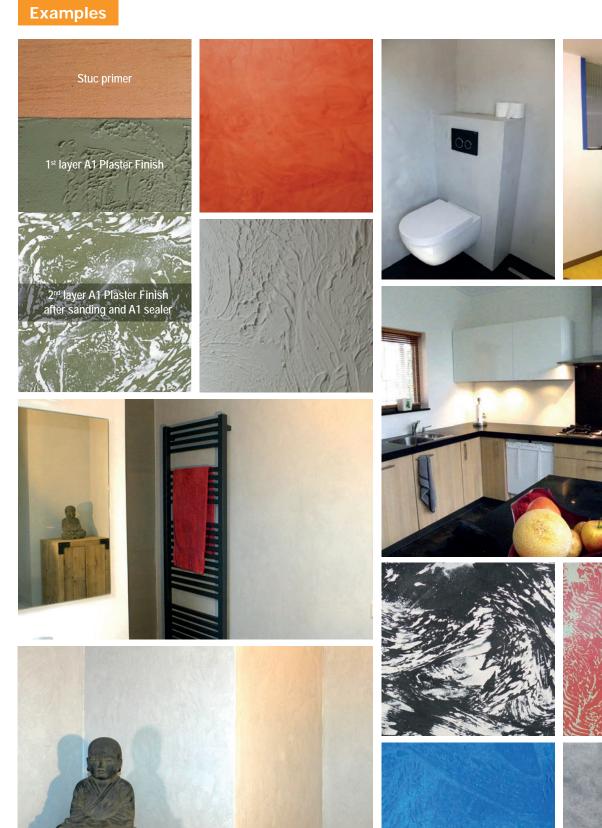

Notes





Nijverheidsweg 15A | 3251 LP Stellendam | The Netherlands T: +31-187-663006 | M: +31-6-51612714 | Email: info@activecomposite.com